

Viltrox EF-M2 II Compatible List

| | |
|-------------------------|--|
| Canon Prime Lens | EF 24MM F1.4 L II USM EF 35mm 1:1.4 L 40MM F2.8 STM 50MM F1.8 STM EF 50MM F1.2 L USM EF 85MM F1.2 L II USM EF 85MM F1.8 EF 100MM F2.8 L IS USM MACRO EF 200MM F2.8 L II |
| Canon Zoom Lens | EF 17-40MM F4 L EF 16-35MM F2.8 L II USM EF 24-70MM F2.8 L II USM EF 24-105MM F4 L IS USM EF 28-105MM F3.5-4.5 EF 20-35MM F3.5-4.5 EF 70-200MM F4 L IS USM EF 70-200MM F2.8 L IS II USM EF 70-200MM F4 L USM EF 70-300MM F4-5.6 L IS USM EF 70-300MM F4-5.6 IS USM EF 70-300MM F4-5.6 IS II USM |
| Tamron Lens | SP 35 F/1.4 Di USD F045 (not support BMPCC4K and BMPCC cameras) SP 35MM F1.8 Di VC USM F012 SP 85MM F/1.8 Di VC USD F016 10-24MM F/3.5-4.5 Di II VC HLD B023 SP 15-30MM F/2.8 USD Di A012 AF 17-50MM F2.8 IF A16 XR DiII SP AF 28-75mm f/2.8 {IF}MACRO A09 LD XR Di SP 35-150MM F2.8-4 DI VS OSD A043 SP 150-600MM F5-6.3 USD Di A011 |
| Sigma Lens | A 20MM F1.4 DG 015 A 24mm 1:1.4 DG 015 A 30MM F1.4 DC 013 A 35MM F1.4 DG 012 A 50MM F1.4 DG 014 50MM F1.4 DG HSM EX A 85MM F1.4 DG 016 (After turning on the BMPCC camera, the aperture is not displayed. Press the lens release button on the back of the camera.) A 105MM F1.4 DG 018 10-20MM F3.5 DC HSM EX A 18-35MM F1.8 DC 013 12-24MM F4.5-5.6 II DG HSM 70-200MM F:2.8 APO DG HSM EX |
| Tokina Lens | SD 11-16 F2.8 (IF) DX II AT-X PRO |